



INSTRUCTION MANUAL

PG5927 PG5936 PG5942


PS5927 PS5936 PS4942

PG5827 PG5836 PG5842



PARTS LIST

*In models: PS5927PP, PS5927BB, PS5936GG, PS5936BB, PG5827, PG5836, PG5842 carrying bag and pad are not included

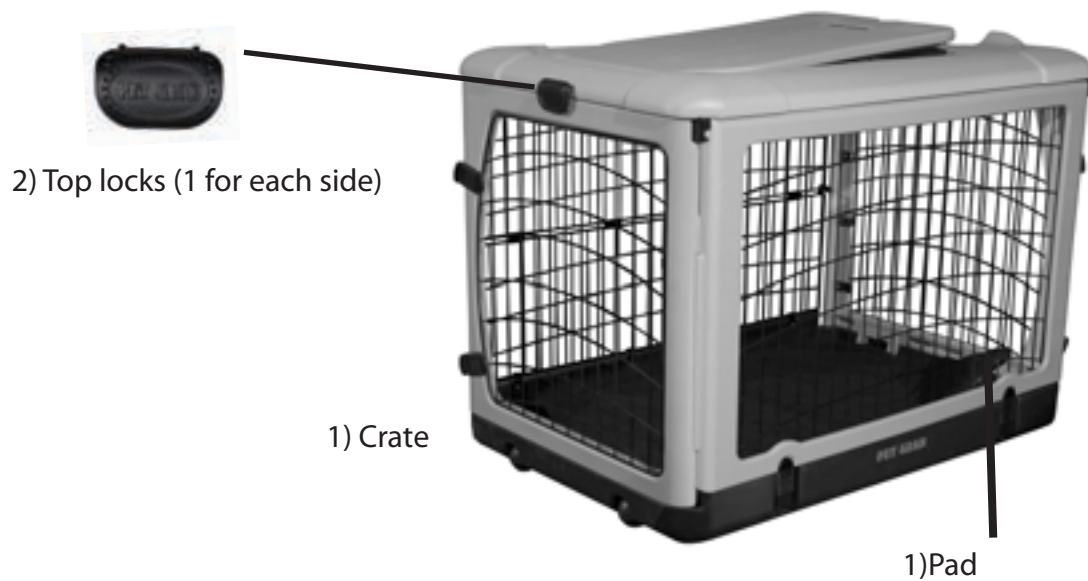

WARNING

- For pets only
- Do not leave pet unsupervised until you know how your pet will react.
- Ensure crate is correctly assembled before using.
- Remove collar and leashes while using product.
- Make sure ALL locks are engaged when product is in use.
- Do not use near an open or exposed flame.

Setting Up Crate

Step 1. Remove from carrying case.



Figure A

Step 2. Place crate on ground as shown, so the pet gear logo on the bottom (black part) is facing towards you. (Figure A)



Figure B

Step 3. Lift top up to a ninety degree angle. (Figure B)



Figure C

Step 4. Pull the top back so that the side wiring is extended. (Figure C)

Setting Up Crate

Step 5. Lift left side up to a ninety degree angle.
(Figure D)



Figure D

Step 6. Lift right side up to a ninety degree angle.
(Figure E)



Figure E

Step 7. Flip bottom base and sides ninety degrees towards the top so the crate is on its side. See Figure F.

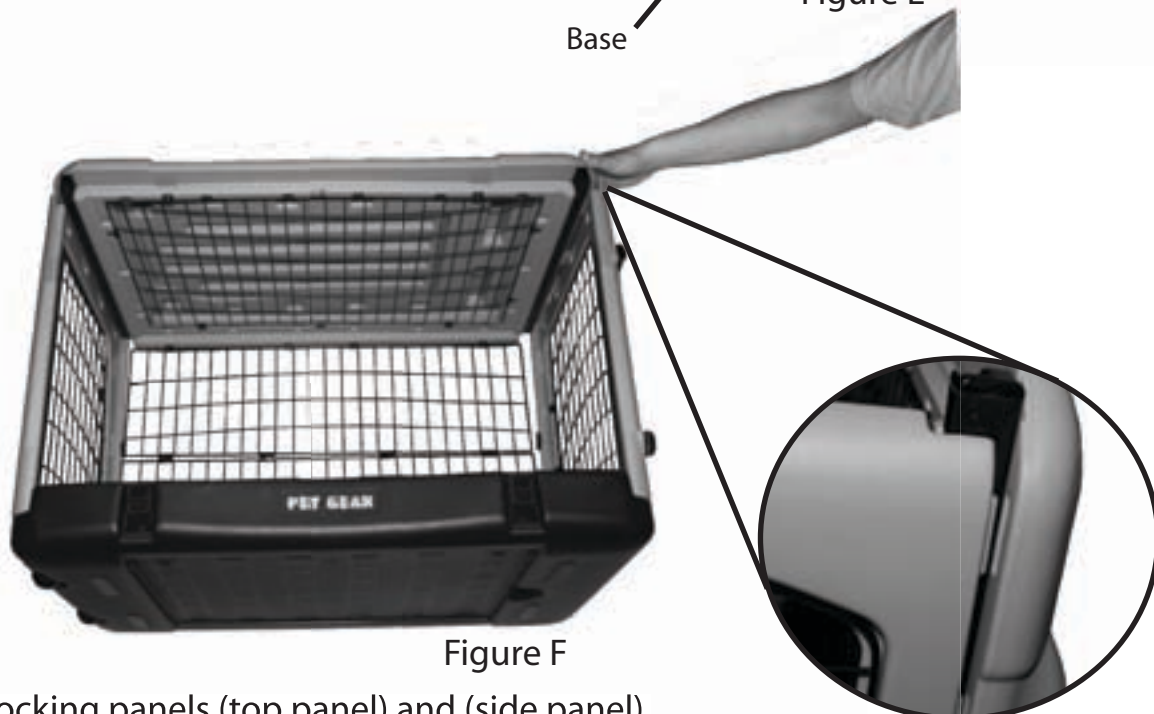


Figure F

Figure G

Step 8. Align the inter-locking panels (top panel) and (side panel). See Figure G. Repeat this on the other side panel.

Setting Up Crate

Step 9. Set crate right side up.

Step 10. Install top lock near the handle. Place lock as shown in Figure H. Put lock into plastic lock holder and push down (Figure I). Repeat step with opposite side.


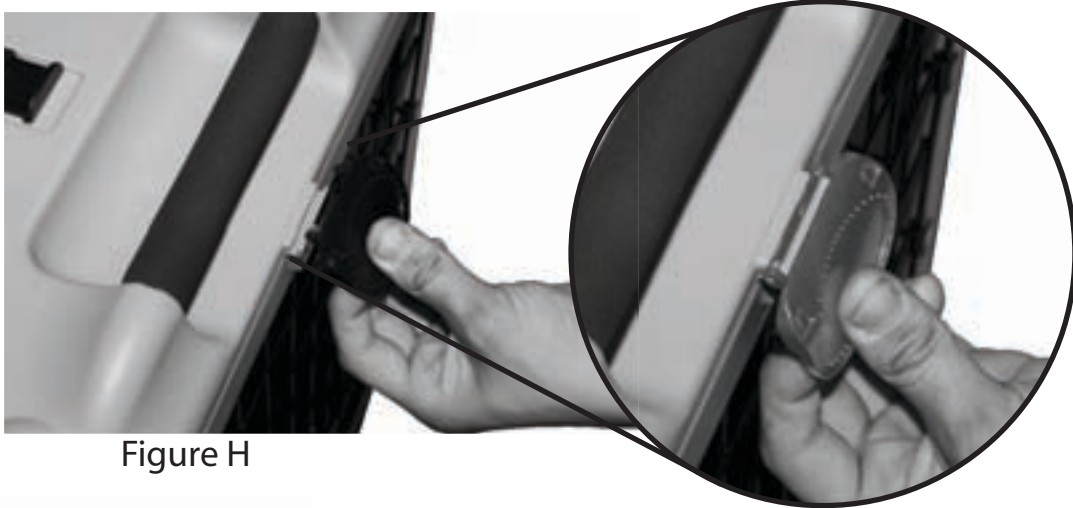


Figure H

Figure I

Step 11. Latch the locks. Extend the lock downward, then lift up to lock the lock in place (Figure J). If bottom part does not latch repeat steps 8-11. Pull up lightly on the lock to make sure lock is fastened.

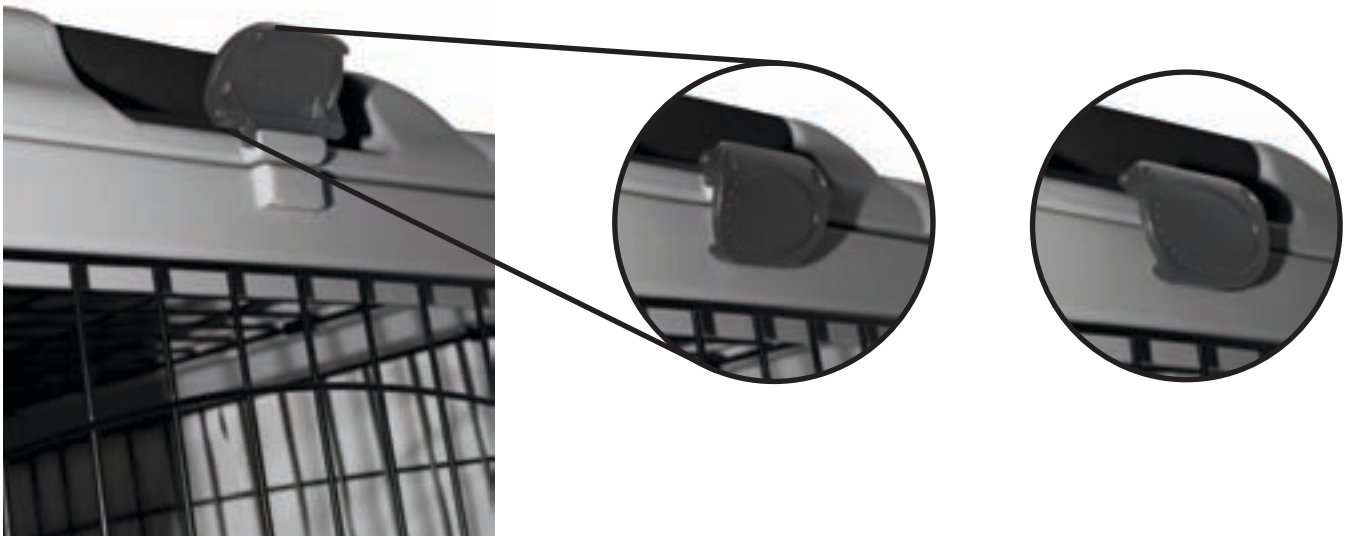

Note: Do not apply excessive force. Recheck steps 8 and 9 if lock closes hard.

Figure J

Step 12. Fasten latch on the left back cage as shown in Figure K. Repeat on right side.

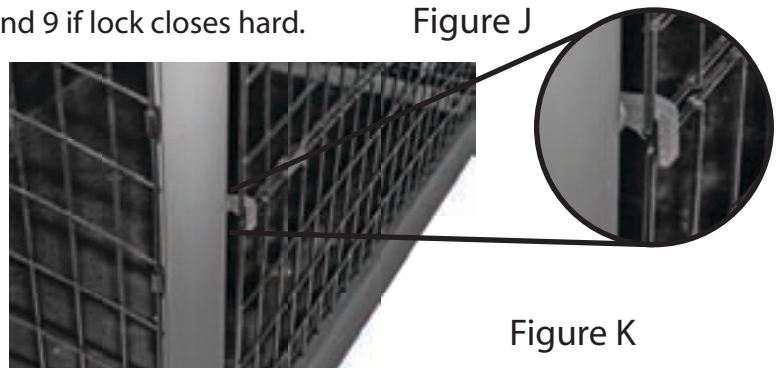


Figure K

Re-connecting "The Other Door"

If you have any questions regarding these instructions visit www.petgearinc.com or call toll free **877-752-9123**

These are the necessary steps to re-connect "the other door" back onto your steel crate.

1. Place crate with wire side on the floor as shown in figure a. De-clip top and flip down (shown in figure b).



figure a



figure b

2. Align door at an angle **with screw side facing the crate**, as shown in figure c. Make sure plastic knobs on both sides are near tracks so that when the door is straightened, knobs will click inside tracks and be re-attached (figure d).



Plastic Knob

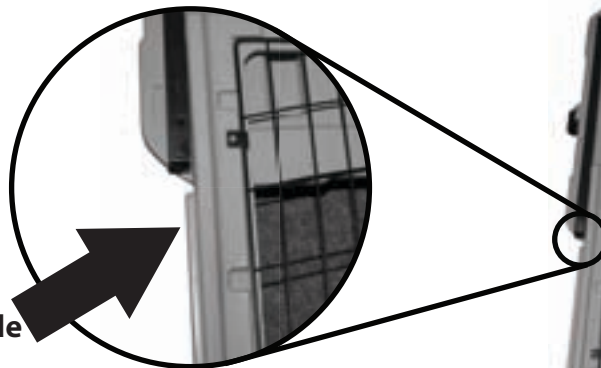


figure c



figure d

3. Lay door flat as shown in figure e. Make sure door guides are aligned with their tracks (shown in figure e) and slide door into track.



Door Guide



figure e